

STANDARD ADAPTER CROSS REFERENCE

To use this chart, locate one end of the adapter in the left or right hand column and the other end along the top or bottom. Find adapter part number where the two intersect. Either refer to the adapter pages for either end or go to the index for an exact page number. If you have adapter requirements not found here, we can fill your needs through our special order program. Contact your distributor.

M = MALE, F = FEMALE

Note: Chart does not run straight across both pages

TYPE	3.5-F	3.5-M	BNC-F	BNC-M	BNC-F 75 OHM	BNC-M 75 OHM	7/16 DIN-F	7/16 DIN-M	F-F	F-M	FME-F	FME-M	MHV-F	MHV-M	MMCX- JACK	TYPE
3.5-F	RF35F-35F-00000	RF35M-35F-00000 RF35M-35F-15000														3.5-F
3.5-M	RF35M-35F-00000 RF35M-35F-15000	RF35M-35M-00000 RF35M-35M- G0000														3.5-M
BNC-F			RFB-1131 RFB-1134 RFB-1135 RFB-1135-I RFB-1135-T RFB-1162	RFB-1130 RFB-1130-1 RFB-1130-2 RFB-1130-3 RFB-1130-5 RFB-1132 RFB-1138					RFB-1153	RFB-1144	RFE-6150	RFE- 6101				BNC-F
BNC-M			RFB-1130 RFB-1130-1 RFB-1130-2 RFB-1130-3 RFB-1130-5 RFB-1132	RFB-1133					RFB-1155		RFE-6151	RFE-6102 RFE- 6103				BNC-M
BNC-F 75 OHM					RFB-1734 RFB-1735 RFB-1735-1	RFB-1730 RFB-1730- 3 RFB- 1730-4 RFB-1732 RFB-1738			RFB-1753							BNC-F 75 OHM
BNC-M 75 OHM					RFB-1730 RFB-1730-3 RFB-1730- 4 RFB-1732 RFB-1738	RFB-1733										BNC-M 75 OHM
7/16 DIN-F							RFD-1653-2 RFD-1658-2	RFD-1652-2 RFD- 1660-2								7/16 DIN-F
7/16 DIN-M							RFD-1652-2 RFD-1660-2	RFD-1650-2 RFD- 1651-2								7/16 DIN-M
F-F			RFB-1153	RFB-1155	RFB-1753					RFF-1445-5 RFF- 1446-10						F-F
F-M			RFB-1144						RFF-1445-5 RFF-1446-10	RFF-1448						F-M
FME-F			RFE-6150	RFE-6151												FME-F
FME-M			RFE-6101	RFE-6102 RFE-6103								RFE- 6100				FME-M
MHV-F													RHV-134	RHV-130		MHV-F
MHV-M													RHV-130			MHV-M
MMCX JACK																MMCX JACK
MMCX PLUG															RMX-9405-1	MMCX PLUG
MOTO- ROLA PHONO			RFB-1141													MOTO- ROLA PHONO
MUHF-F				RFU-627							RFE-6152	RFE- 6104				MUHF-F
MUHF-M			RFU-622								RFE-6153	RFE- 6105				MUHF- M
N-F			RFN-1023-5 RFN-1039-1	RFN-1038-1			RFD-1673-2	RFD-1671-2								N-F
N-M			RFN-1037-1	RFN-1040-1			RFD-1672-2	RFD-1670-2				RFE- 6107				N-M
RCA-F			RFB-1151	RFB-1139												RCA-F
RCA-M			RFB-1140 RFB-1152		RFB-1752											RCA-M
SMA-F			RFB-1142 RSA-3413	RSA-3476 RSA-3476-1								RFE-6110				SMA-F
SMA-M			RSA-3458	RSA-3459								RFE-6111	RSA-3494			SMA-M
SMB- JACK																SMB- JACK
TNC-F			RFT-1232	RFT-1230							RFT-1240 RFT-1240-1					TNC-F
TNC-M			RFT-1231								RFE-6155	RFE-6108 RFE- 6109				TNC-M
UHF-F			RFU-545	RFB-1136												UHF-F
UHF-M			RFB-1137									RFE-6112				UHF-M
TYPE	3.5-F	3.5-M	BNC-F	BNC-M	BNC-F 75 OHM	BNC-M 75 OHM	7/16 DIN-F	7/16 DIN-M	F-F	F-M	FME-F	FME-M	MHV-F	MHV-M	MMCX- JACK	TYPE

Cross Ref

Cross Ref



ADAPTER CROSS REFERENCE — Continued

Note: Chart does not run straight across both pages

TYPE	MMCX-PLUG	MOTOROLA PHONO	MUHF-F	MUHF-M	N-F	N-M	RCA-F	RCA-M	SMA-F	SMA-M	SMB-JACK	TNC-F	TNC-M	UHF-F	UHF-M	TYPE
3.5-F																3.5-F
3.5-M																3.5-M
BNC-F		RFB-1141		RFU-622	RFN-1023-5 RFN-1039-1	RFN-1037-1	RFB-1151	RFB-1140 RFB-1152	RFB-1142 RSA-3413 RSA-3413-3	RSA-3458		RFT-1232	RFT-1231	RFU-545	RFB-1137	BNC-F
BNC-M			RFU-627		RFN-1038-1	RFN-1040-1	RFB-1139		RSA-3476 RSA-3476-1	RSA-3459		RFT-1230		RFB-1136		BNC-M
BNC-F 75 OHM								RFB-1752								BNC-F 75 OHM
BNC-M 75 OHM																BNC-M 75 OHM
7/16 DIN-F					RFD-1673-2	RFD-1672-2										7/16 DIN-F
7/16 DIN-M					RFD-1671-2	RFD-1670-2										7/16 DIN-M
F-F																F-F
F-M																F-M
FME-F			RFE-6152	RFE-6153								RFT-1240 RFT-1240-1	RFE-6155			FME-F
FME-M			RFE-6104	RFE-6105		RFE-6107			RFE-6110	RFA-6111			RFE-6108 RFE-6109	RFE-6112		FME-M
MHV-F										RSA-3494						MHV-F
MHV-M																MHV-M
MMCX- JACK	RMX-9405-1															MMCX- JACK
MMCX- PLUG									RSA-3408-1							MMCX- PLUG
MOTO- ROLA PHONO																MOTO- ROLA PHONO
MUHF-F			RFU-629 RFU-632	RFU-630 RFU-630-1 RFU-630-6 RFU-630-7 RFU-630-8 RFU-631 RFU-643		RFU-625 RFU-625-03			RSA-3471	RSA-3450				RFU-628	RFU-626	MUHF-F
MUHF-M			RFU-630 RFU-630-1 RFU-630-6 RFU-630-7 RFU-630-8 RFU-631 RFU-643	RFU-624	RFU-620				RSA-3470	RSA-3451		RFU-623 RFU-623-5 RFU-633		RFU-621	RFU-645	MUHF-M
N-F				RFU-620	RFN-1011-1 RFN-1013-1 RFN-1023	RFN-1010-1 RFN-1012-1 RFN-1017			RSA-3290 RSA-3290-10 RSA-3412 RSA-3477 RSA-3477-03	RSA-3452		RFT-1239	RFT-1234 RFT-1234-11	RFN-1034-1	RFN-1036-1	N-F
N-M			RFU-625 RFU-625-03		RFN-1010-1 RFN-1012-1 RFN-1017	RFN-1014-1			RSA-3478	RSA-3453		RFT-1233		RFN-1035-1		N-M
RCA-F							RCA-1950-03						RFT-1237			RCA-F
RCA-M												RFT-1238				RCA-M
SMA-F	RSA-3408-1		RSA-3471	RSA-3470	RSA-3290 RSA-3290-10 RSA-3412 RSA-3477 RSA-3477-03	RSA-3478			RSA-3401 RSA-3404 RSA-3410 RSA-3410-1	RFS-2028 RSA-3400 RSA-3400-1 RSA-3402 RSA-3402-1 RSA-3405 RSA-3405-1	RSA-3406 RSA-3406-1	RSA-3473	RSA-3472	RSA-3475	RSA-3474	SMA-F
SMA-M			RSA-3450	RSA-3451	RSA-3452	RSA-3453			RFS-2028 RSA-3400 RSA-3400-1 RSA-3402 RSA-3402-1 RSA-3405 RSA-3405-1	RSA-3403 RSA-3403-1		RFT-1241-6	RSA-3454	RSA-3457	RSA-3456	SMA-M
SMB- JACK									RSA-3406 RSA-3406-1							SMB- JACK
TNC-F				RFU-623 RFU-623-5 RFU-633	RFT-1239	RFT-1233		RFT-1238	RSA-3473	RFT-1241-6		RFT-1225 RFT-1226 RFT-1229	RFT-1227 RFT-1228 RFT-1242		RFT-1236	TNC-F
TNC-M			RFU-628		RFT-1234 RFT-1234-11		RFT-1237		RSA-3472	RSA-3454		RFT-1227 RFT-1228 RFT-1242	RFT-1224	RFT-1235		TNC-M
UHF-F				RFU-621	RFN-1034-1	RFN-1035-1			RSA-3475	RSA-3457			RFT-1235	RFU-534 RFU-536 RFU-537 RFU-537-SO	RFU-532 RFU-533	UHF-F
UHF-M			RFU-626	RFU-645	RFN-1036-1				RSA-3474	RSA-3456		RFT-1236		RFU-532 RFU-533	RFU-538	UHF-M
TYPE	MMCX-PLUG	MOTOROLA PHONO	MUHF-F	MUHF-M	N-F	N-M	RCA-F	RCA-M	SMA-F	SMA-M	SMB-JACK	TNC-F	TNC-M	UHF-F	UHF-M	TYPE

Cross Ref

Cross Ref



Find adapters for WiFi and broadband on next page.



fax: (858)549-6345

• email: rfi@rfindustries.com• web: www.rfindustries.com